

# ASSA ABLOY

## SERIES DQ, DU, and/or DR DRYWALL FRAMES

### INSTALLATION INSTRUCTIONS

(DOES NOT APPLY TO CASED OPENING FRAMES)

#### TO DETERMINE ROUGH OPENING:


ADD 2" TO DOOR OPENING WIDTH

ADD 1" TO DOOR OPENING HEIGHT

e.g., For a 3'0" x 6'8" door opening when frame components have a 2" face, the rough opening is: 38" x 81"

#### PROCEDURE


##### STEP 1

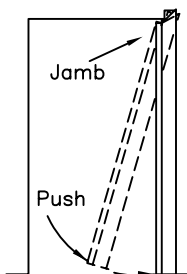

##### STEP 1

- Begin installation by pushing the top of one jamb over the wall.
- Hold the top in place then push the bottom in towards and over the wall.

##### STEP 2

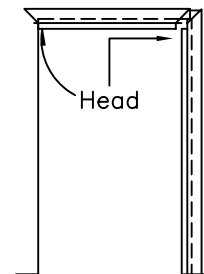


##### STEP 2

- Position frame head over the wall.
- Align head tabs with jamb slots then slide head towards jamb and engage tabs in slots.

##### STEP 3

- Push the top of the remaining jamb over wall and mate jamb slots and head tabs.
- Push the bottom of this jamb in towards and over the wall.
- Level the head.

##### STEP 3

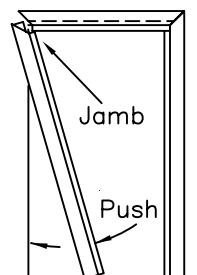


##### STEP 4

- Insert screw driver into top plumb anchor screws. Alternately adjust top plumb anchors until they bear firmly against studs.


**Note: Step B. below is required for labeled frames**

- Insert (4) #8 x 1/2" MIN. (Phil) PHSMS through holes in head backbends and fasten to jamb miter guides (by others).
- Verify that head is still level, and shim under jambs only if necessary.
- Plumb hinge jamb and fasten at sill.\*
- Place a temporary wood spreader between jambs at sill. Adjust strike jamb to fit firmly against spreader and fasten at bottom of this jamb.\*
- Adjust intermediate plumb anchors (if present) until they too bear firmly against studs
- Install mutes in holes provided in strike jamb, or head if double door opening.


##### STEP 4

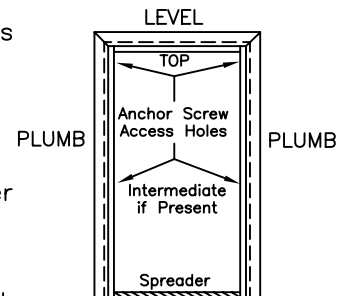

Wood spreader must be square and at least 1" thick. Length of spreader equals door opening width. Spreader must be nearly as wide as frame depth. Notch around frame stop.

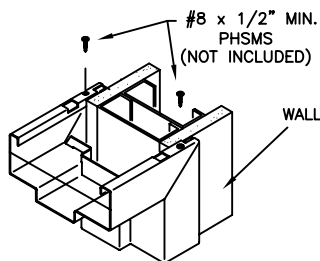


FASTENERS AT HEAD  
(Required on all labeled frames)

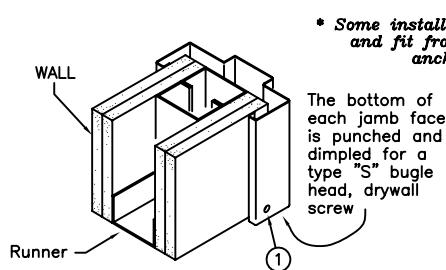

STANDARD SILL ANCHOR

\* Some installers prefer to hang door and fit frame to door prior to anchoring at sill.

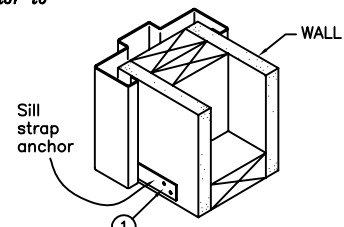

OPTIONAL SILL ANCHOR

① Insert fasteners (not included) and fix jamb to wall framing